

# Safety and Assembly Instructions

## IMPORTANT

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE



WARNING! CHOKING HAZARD – SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.  
WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 330 LBS (150 KGS). WARNING! DO NOT USE WITHOUT ADULT SUPERVISION! WARNING! ADULT ASSEMBLY REQUIRED!

## ESSENTIAL INFORMATION

- Recommended for children 3+
- Do not leave child unattended while in use
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times
- Read all instructions before using this product

Intended solely for family and domestic use, not for a commercial playground or daycare. Two adults needed for assembly. Maximum weight capacity: 330 LBS (150 KGS).

Hanging hardware included (2x flat nylon straps and 2x carabiners). Ideally, the swing body should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 15" (38cm). Two S-hooks are attached to the rope to allow for adjustment of the rope length.

Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the color of the rope has become pale, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the rope.

## WARNING! Small parts for assembly by an adult

Tools required (included with the packaging)



# Assembly Steps



1. Carefully remove contents from box and ensure there are no parts missing (see step 2 for parts list).



2. The swing kit contains 4 metal tubes with foam, 2 hanging ropes, a jump body, 2 nylon straps, 2 carabiners, and a socket wrench



3. Place the jump body with logo face up on a flat surface. Place the 4 metal tubes with foam along the edge of the jump body



4. Make sure the 4 metal tubes are positioned such that each tube with a small opening aligns with one with a larger opening



5. Undo each of the 4 velcro straps such that they are in the fully-open position



6. Slide the 4 metal tubes with foam through their respective sleeves



7. Connect all 4 steel tubes, aligning the hole of the small opening with the hole of the large opening



8. As the tubes are connected fold over each velcro strap, however do not connect the velcro just yet (see red and blue above)



9. Connect ropes by inserting the bolt through velcro strap slot and the holes of the aligned steel tubes



10. Place washer first through bolt then hand tighten nut. Further tighten with socket wrench. Repeat with all 4 rope bolts.



11. Fold velcro strap and connect with bottom. Repeat with all 4 velcro straps.



12. Ready to swing! (note: the carabiners and nylon straps are for hanging)

## Hanging the Swing

Use provided carabiners and flat black nylon straps to hang the swing. Equipment should be hung in a way that a distance of at least 6.5' (2m) is clear on either side. The swing can be hung on an A-frame, swing set, beam or on a tree limb of a diameter of at least 10" (25cm).

## Ensuring Safety of the Swing

The clearance distance around the swing should be a minimum of 13' (4m). A fall on to a hard surface can result in serious injury to the user of the equipment. Do not use the equipment until properly assembled and installed. This swing is not to be used in any other manner other than its intended use. Adult supervision is required. Adults should verify that the hanging ropes are secured and cannot be looped back on the swing

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing with full weight on the seat if swinging alone
- Avoid swinging empty seats

It is important for adults to instruct children **NOT TO**

- Walk close to, in front of, behind, or between moving items
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the swing while it is in motion
- Climb on the swing when it is wet

- Attach additional items to the swing that might cause a strangulation hazard
- Wear a bicycle or sport helmet while on the swing

## Maintaining the Swing

At the beginning of each play session, adults should

- Tighten all hardware
- Check all protective coverings on pipes, edges, and corners and replace if they are loose, cracked, or missing
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration, and replace as needed. The hardware used for this swing (binding post, screw, S-hook, lock washer, flat washer, and metal ring) can be found at a local hardware store
- Check metal parts for rust, and if found repaint using a non-lead-based paint meeting EN71 requirements
- If the swing is hung from a swing-set frame, lubricate all metallic moving parts that are attached by a metal connection
- If the swing is hung from a tree branch rake and check the depth of loose-fill protective surfacing materials (e.g. mulch or sand) to prevent compaction and to maintain appropriate depth (min amount is 10" or 25cm), replace as needed
- Twice a month during play season, adults should;
  - Tighten all hardware
  - Check all protective covering on pipes, edge, and corners and replace if they are loose, cracked, or missing
  - If the swing is hung from a tree branch, rake and check the depth of loose-fill protective surfacing materials (e.g. mulch or sand) to prevent compaction and to maintain appropriate depth (min amount 25cm), replace as needed
- At the end of each play season, or when hazardous weather exists, adults should;
  - Remove the swing from its outdoor location
  - Store the swing in a dry environment

## Disposing of the Swing

To dispose of the swing, first disassemble it. Dispose of the swing in such a way that no unreasonable hazards will exist at the time that the swing is being discarded. This conforms to EN71, the consumer safety performance specification for home playground equipment.

## Website, Customer Service and Feedback

Go to [www.playgoz.com](http://www.playgoz.com) for more information, videos, and additional hanging instructions! Playgoz is a small US family-owned business and our goal is for you to be completely satisfied with your transaction along with providing our customers with the best service and the best quality products. Your satisfaction is extremely important to us and your feedback is a valuable reference for other customers. We are continuously improving our products based on your opinions thus we sincerely hope that you can leave us Seller Feedback and/or a Product Review. Thank you! If you are NOT totally satisfied for any reason, please just let us know and we'll make things right. 😊

