

Safety and Assembly Instructions

IMPORTANT

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS, KEEP FOR FUTURE REFERENCE



WARNING! CHOKING HAZARD – SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.
WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 250 LBS (113 KGS).
WARNING! DO NOT USE WITHOUT ADULT SUPERVISION.
WARNING! ADULT ASSEMBLY REQUIRED.

DISCLAIMER: The Purchaser of the Climbing Rope with LED Disc Swing assumes all liability for the assembly, installation, use, and maintenance of this product.

ESSENTIAL INFORMATION

- Recommended for children 3+
- Do not leave child unattended while in use
- CAUTION: Use only under adult supervision
- Good safety practices should be followed at all times
- Read all instructions before using this product



Intended solely for family and domestic use, not for a commercial playground or daycare. One adult needed for assembly. Maximum weight capacity: 250 LBS (113 KGS).

WARNING! Small parts for assembly by an adult

Tools required (**not** included with the packaging)



Battery Installation Steps



1. On the underside of the swing locate the battery cover and unscrew the 2x screws with a screwdriver (not included)



2. Once unscrewed, remove the battery cover and set aside




3. Install 3x AA batteries (not included). Important: Make sure each battery "+" sign lines up with flat contact and each "-" sign lines up with spring contact



4. Place battery cover back on swing and firmly tighten 2x screws



5. Press button to the left of the battery cover to activate LED lights

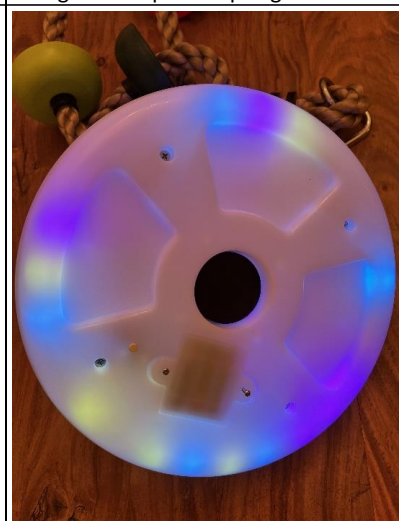

6. Confirm LED lights are activated and you are ready to hang your swing!

LED Lighting Timeframe

Once turned on the LED lights will stay activated as long as the swing is in motion. After approximately one minute of inactivity the LED lights will turn off. Any motion of the swing at that point over the next approximately 12 minutes will re-activate the LED lights. After approximately 12 minutes of inactivity the LED lights will turn off and the button will need to be pressed to turn on the LED lights. *Note:* the button does not turn off the lights.

Hanging the Swing

Hanging hardware included (1x flat nylon strap and 1x carabiner). You may need to use other chains, links, straps or fasteners to attach depending on your structure. Equipment should be hung in a way

that a distance of at least 6.5' (2m) is clear on either side. The swing can be hung on an A-frame, swing set, beam or on a tree limb of a diameter of at least 10" (25cm).

A fall on to a hard surface can result in serious injury to the user of the equipment. Ideally, the swing should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 15" (38cm). The nylon strap allows for adjustment of the total length.


Tree Branch – Recommended Hanging Configuration



1. Hang the nylon strap centered on the tree branch. Pass one end of the nylon strap through the opening of the other end. Pull snug such that the strap is looped around and fully contacting the branch



2. Connect the hanging end of the nylon strap to the carabiner. Connect the carabiner to the metal ring on the swing.

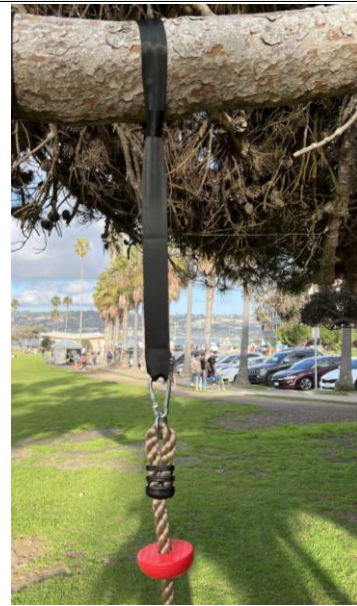

3. Good to go!

Ensuring Safety of the Swing

Do not use the equipment until properly installed. This swing is not to be used in any other manner other than its intended use. Adult supervision is required. Adults should verify that the hanging rope is adequately secured.

Please be sure to examine the rope regularly to check for wear. Rope will, in time, degrade. If the color of the rope has become pale, frays easily, or gives off a powdery material when rubbed between the fingers, or if the product shows other signs of wear, looseness, or develops sharp edges immediately remove the Climbing Rope with LED Disc Swing and contact Playgoz for replacement parts. Do not use or substitute parts that are not Playgoz products.

It is important for adults to instruct children to dress appropriately while using the swing (avoid scarves, and other loose-fitting clothing that is potentially hazardous).

It is important for adults to instruct children **NOT TO**

- Walk close to, in front of, behind, or between moving items
- Twist rope or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the swing while it is in motion
- Climb on the swing when it is wet
- Attach additional items to the swing that might cause a strangulation hazard
- Wear a bicycle or sport helmet while on the swing

Maintaining the Swing

At the beginning of each play session, adults should

- Tighten all hardware
- Check all moving parts including disc swing seat, platforms, rope for wear, rust, or other deterioration, and replace as needed.
- Check screws for rust, and if found replace
- If the swing is hung from a swing-set frame, lubricate all metallic moving parts that are attached by a metal connection
- If the swing is hung from a tree branch rake and check the depth of loose-fill protective surfacing materials (e.g. mulch or sand) to prevent compaction and to maintain appropriate depth (min amount is 10" or 25cm), replace as needed
- Twice a month during play season, adults should;
 - Tighten all hardware
 - If the swing is hung from a tree branch, rake and check the depth of loose-fill protective surfacing materials (e.g. mulch or sand) to prevent compaction and to maintain appropriate depth (min amount is 10" or 25cm), replace as needed
- At the end of each play season, or when hazardous weather exists, adults should;
 - Remove the swing from its outdoor location
 - Store the swing in a dry environment

Disposing of the Swing

To dispose of the swing, first disassemble it. Dispose of the swing in such a way that no unreasonable hazards will exist at the time that the swing is being discarded. This conforms to EN71, the consumer safety performance specification for home playground equipment.

Website, Customer Service and Feedback

Go to www.playgoz.com for more information, videos, and additional hanging instructions! Playgoz is a small US family-owned business and our goal is for you to be completely satisfied with your transaction along with providing our customers with the best service and the best quality products. Your satisfaction is extremely important to us and your feedback is a valuable reference for other customers. We are continuously improving our products based on your opinions thus we sincerely hope that you can leave us Seller Feedback and/or a Product Review. Thank you! If you are NOT totally satisfied for any reason, please just let us know and we'll make things right. 😊

